

10-Page
Tutorial

SIDE-RELEASE ADJUSTABLE COLLAR

Adjustable Pet Collar Sewing Guide



Sizes: Small 10–14 in • Medium 14–18 in • Large 18–22 in

This guide will teach you how to sew a strong, adjustable pet collar using a side-release buckle and slider with a clear, step-by-step method perfect for products made for sale.



1

TOOLS, MATERIALS & FINISHED DESIGN

Side-Release Adjustable Collar Sewing Guide

YOU'LL NEED

-  1 in (25 mm) nylon or polypropylene webbing
-  1 in (25 mm) side-release buckle (male + female parts)
-  1 in (25 mm) tri-glide slider
-  1 in (25 mm) D-ring
-  Matching thread
-  Sewing clips or pins
-  Ruler or tape measure
-  Lighter or heat tool
-  Sewing machine

FINISHED DESIGN



SELLER TIP

Use 1-inch hardware and webbing for a classic everyday collar that is easy to size, sew, and sell.


SIZE CHART & CUT LIST

Standard Selling Sizes for the Webbing Collar Base


Item	Small 10–14 in	Medium 14–18 in	Large 18–22 in
Neck range:	10–14 in	14–18 in	18–22 in
Webbing length (cut 1):	22 in	26 in	30 in
Fold-back allowance at fixed end:	1.5 in	1.5 in	1.5 in
Finished collar width:	1 in	1 in	1 in

PATTERN PIECE DIAGRAMS


Small
10–14 in

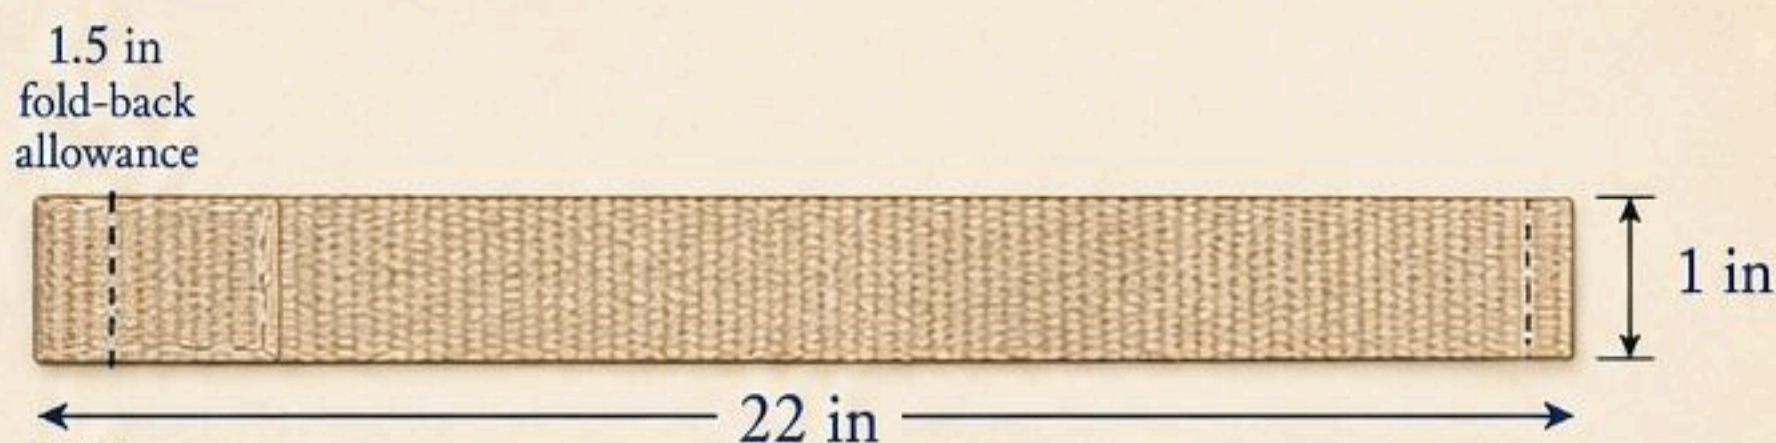

Medium
14–18 in

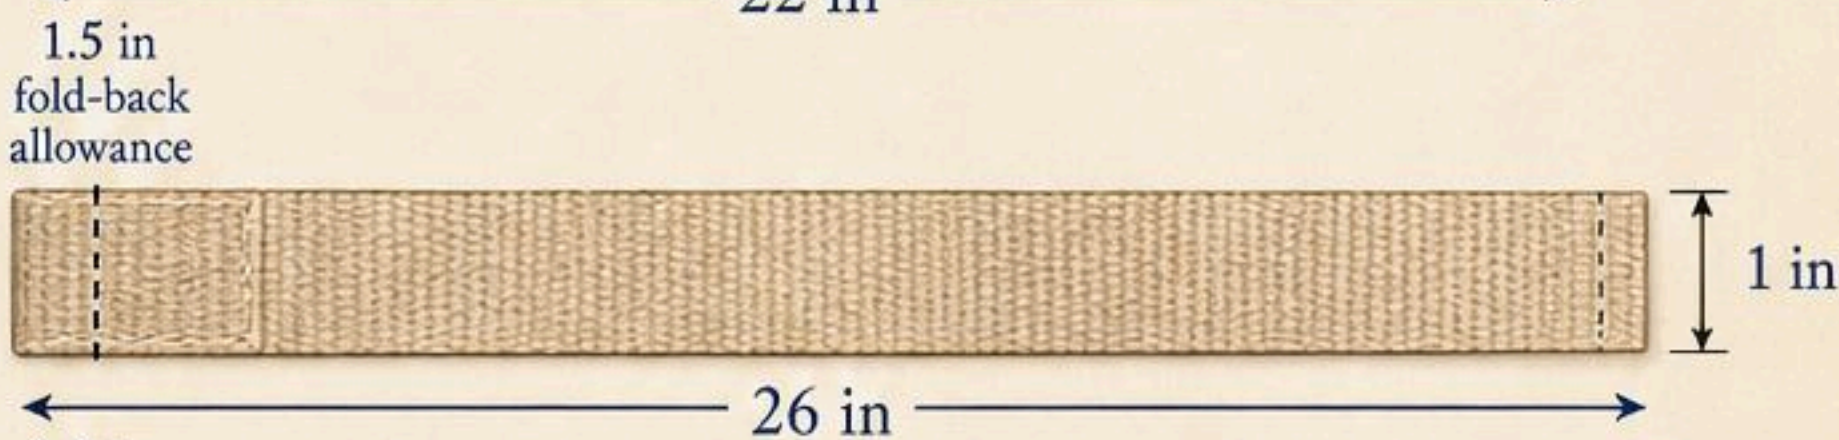

Large
18–22 in

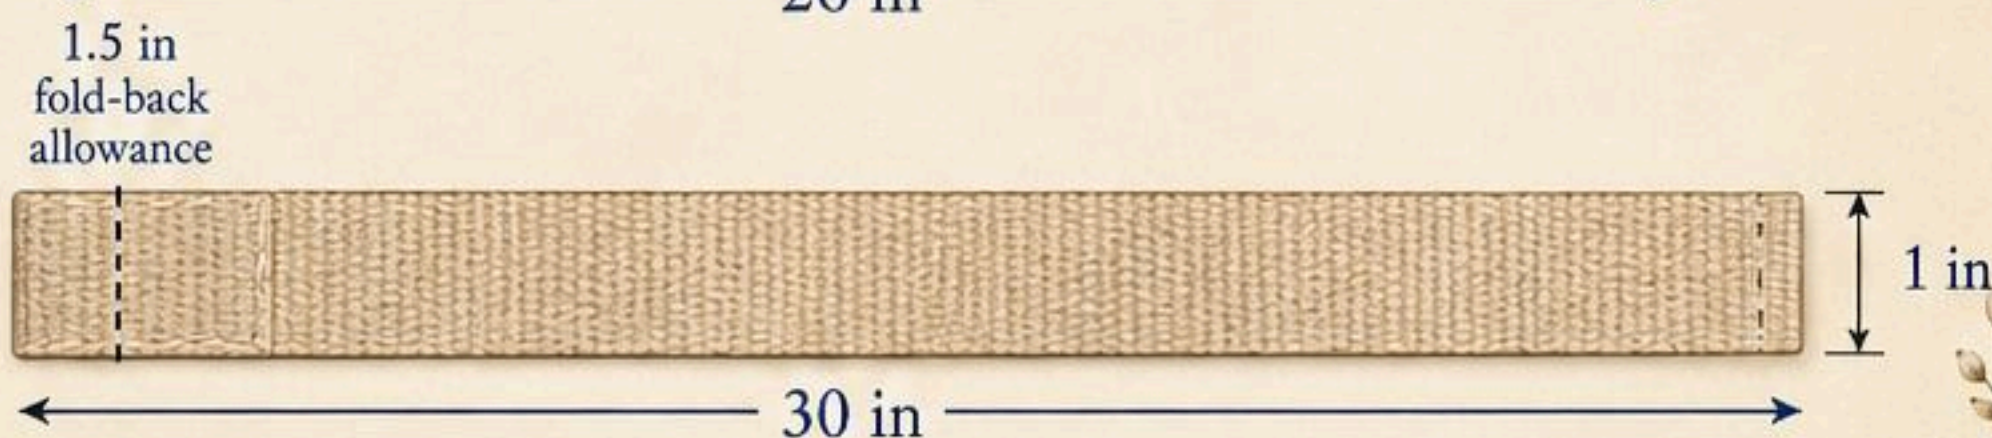

These measurements are designed for collars made to sell in standard small, medium, and large size ranges.

CUT & PREP THE WEBBING

Prepare the strap neatly before assembly


- 1** Cut the webbing to the correct length using the size chart on page 3.



- 2** Lightly heat-seal both cut ends to prevent fraying.



- 3** On one end, mark a 1.5 in fold-back section for the fixed buckle end.

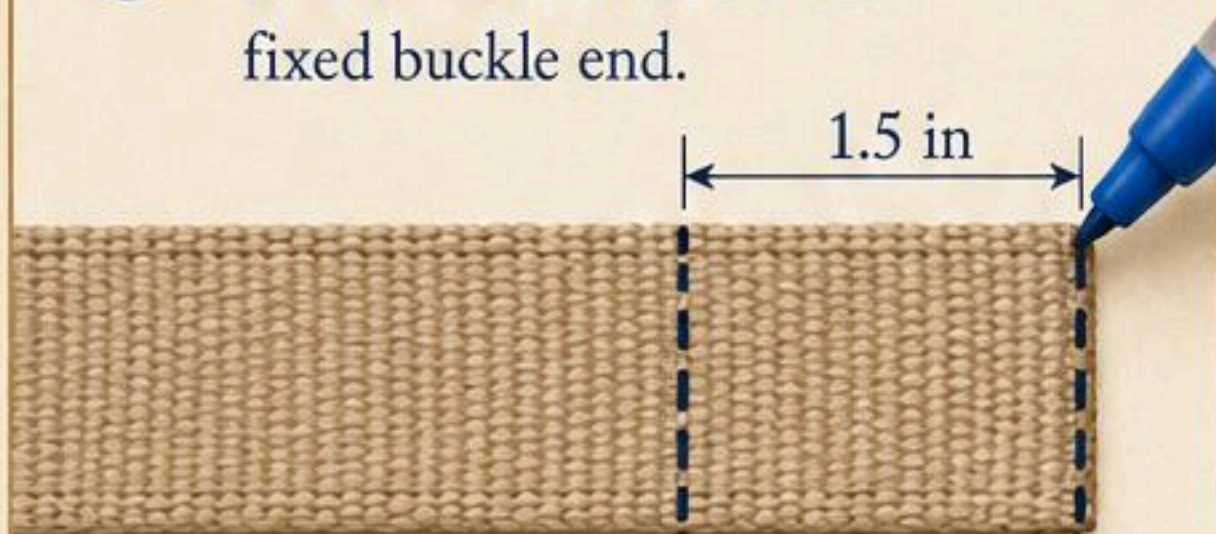

- 4** Keep the opposite end free and straight because it will become the adjustable tail.



TIP


Neat preparation makes the collar easier to assemble and gives a more professional result.

ATTACH THE FIXED END

Secure the D-ring and female buckle side

1

Slide the D-ring onto one end of the webbing.

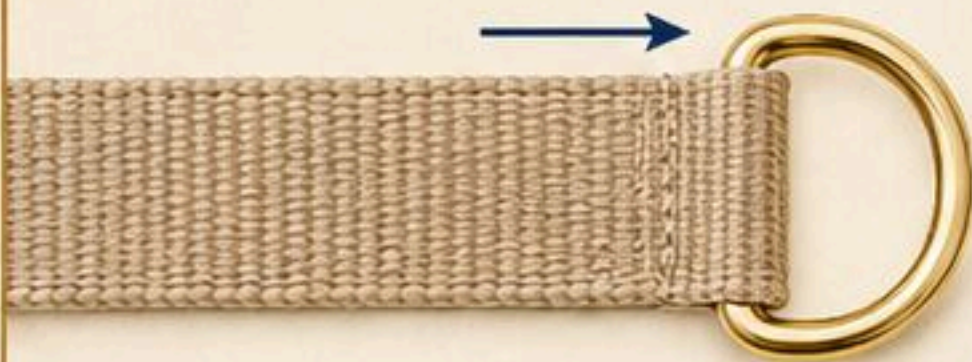

2

Thread that same end through the female side-release buckle slot.



3

Fold the webbing end back by 1.5 in so the D-ring sits between the buckle and the folded section.



4

Stitch a strong box-X through the folded section to secure the female buckle end.




FIXED END COMPLETED



ADD THE TRI-GLIDE SLIDER

Start the adjustable side of the collar

- 1** Take the free end of the webbing and thread it up through one opening of the tri-glide slider.

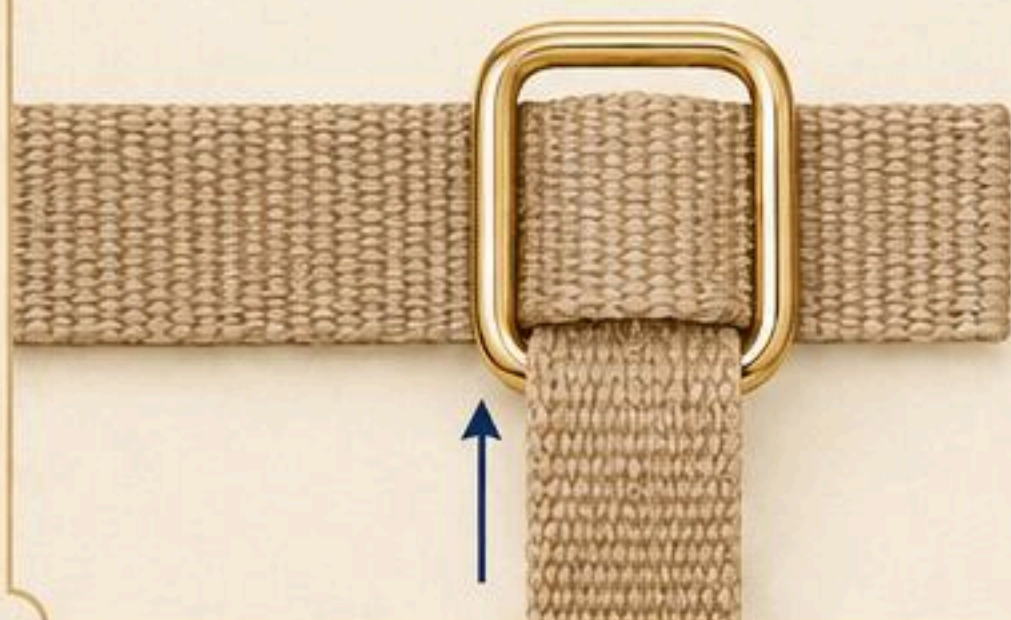

- 2** Bring the webbing down through the other opening so the slider sits on the strap.



- 3** Pull several inches through to create enough working tail for the next steps.



- 4** The tri-glide is now correctly positioned on the strap before the male buckle is added.



ORDER SO FAR

Fixed end



Tri-glide added

ADD THE MALE BUCKLE

Thread the adjustable tail through the buckle

1




Take the free webbing end coming from the tri-glide.

2



Thread it through the slot of the male side-release buckle.

3

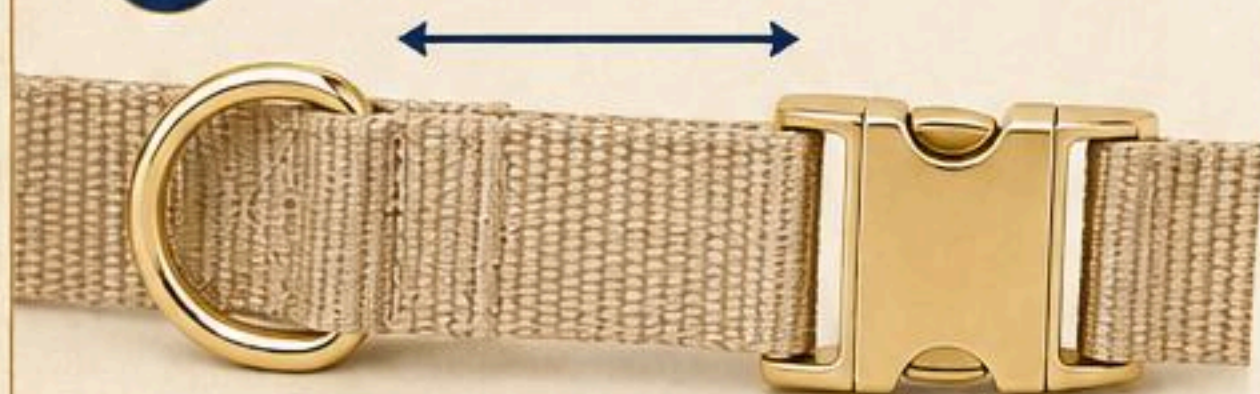

Pull the webbing through so the male buckle sits on the strap several inches away from the tri-glide.

4



Bring the free end back toward the tri-glide because the adjustable loop will be completed next.

ORDER OF PARTS (LEFT TO RIGHT)



Female buckle
+ D-ring end



Long collar strap



Male
buckle



Tri-glide



Free tail returning
toward tri-glide

COMPLETE THE ADJUSTABLE LOOP

Thread the tail back through the tri-glide

- 1** Bring the free strap end back to the tri-glide.



- 2** Thread the free end back through the remaining opening of the tri-glide to lock the adjustment system.



- 3** Pull the tail through until the collar forms a smooth adjustable loop.



- 4** Buckle the collar and test that the strap slides smoothly through the tri-glide while staying secure.



ADJUSTABLE COLLAR ASSEMBLED



FINISH & TEST THE COLLAR

Check function, stitching, and overall appearance

- 1** Fasten the buckle and lay the collar flat to inspect the overall shape.



- 2** Slide the tri-glide to test the adjustment range and confirm the collar moves smoothly.



- 3** Check the box-X stitches at the fixed end and confirm the D-ring and buckle are secure.



- 4** Trim any loose threads and lightly tidy the webbing if needed.



Your collar should lie flat, adjust easily,
and have straight stitching with no visible fraying.

CHECK THE SIZES & QUALITY CHECK



1 Small

Adjusts from
10–14 in inside
circumference.



2 Medium

Adjusts from
14–18 in inside
circumference.



3 Large

Adjusts from
18–22 in inside
circumference.

FINISHED SELLING SIZES

Size	Adjustable Range (Inside Circumference)	Webbing Length
Small	10–14 in	22 in
Medium	14–18 in	26 in
Large	18–22 in	30 in



QUALITY CHECKLIST

- stitches are straight
- hardware is secure
- collar adjusts smoothly
- no raw edges visible
- D-ring is firmly attached
- collar lies flat



CARE INSTRUCTIONS

- spot clean with mild soap and water
- air dry flat
- do not bleach



SELLER NOTE

Be sure to list the neck size range, collar width, and hardware color in your product title or description so buyers know exactly what they are getting.